Important general data:

Shaft	Direct mounting	Depends on the application
	Sleeve mounting	h9/IT5 - h10/IT7
Supporting	Flatness	IT7 - IT8
	Surface roughness	$R_a \leq 12{,}5$ µm
Cap bolts	Please note that the housings are supplied with the cap bolts partly unscrewed to make it more easy to remove cap when mounting bearing. After mounting it is most important to tighten the cap bolts to correct tightening torque, if not the bearing seating tolerance in housing will not remain within the specification.	
Painting system	Alkyd RAL 9005	Pigment black
	Thickness	80 µm
Coating	The colour is possible to coat. **Important to notice.** The colour is resistant to normally used low-alkalic detergents. Follow the recommendations from the detergent supplier.	

Mounting of bearing reference

SKF Bearing Maintenance Handbook (publication 4100) or SKF General Catalogue (publication 6000).

Table 1

Housing	Cap bolts 8.8 Tightening torque		Attachment bolts 8.8 Tightening torque	
		Nm		Nm
SNLN 3024	M 20×100	200	M 24	665
SNLN 3026	M 20×100	200	M 24	665
SNLN 3028	M 20×110	200	M 24	665
SNLN 3030	M 24×130	350	M 24	665
SNLN 3032	M 24×130	350	M 24	665
SNLN 3034	M 24×130	350	M 30	1 310
SNLN 3036	M 24×130	350	M 30	1 310
SNLN 3038	M 24×140	350	M 30	1 310
SNLN 3040	M 24×140	350	M 30	1 310
SNLN 3044	M 30×170	400	M 36	2 280
SNLN 3048	M 30×170	400	M 36	2 280
SNLN 3052	M 36×200	600	M 42	3 640
SNLN 3056	M 36×200	600	M 42	3 640

Table 2 Recommended grease levels for SNLN plummer blocks housings.

Housing Designation	Grease quantities First fill[1] 40 %	20 %
-	kg	
SNLN 3024	0,47	0,25
SNLN 3026	0,67	0,36
SNLN 3028	0,71	0,38
SNLN 3030	0,89	0,48
SNLN 3032	0,97	0,53
SNLN 3034	1,37	0,74
SNLN 3036	1,77	0,96
SNLN 3038	1,90	1,03
SNLN 3040	2,01	1,11
SNLN 3044	2,61	1,44
SNLN 3048	3,45	1,88
SNLN 3052	3,77	2,10
SNLN 3056	4,25	2,36

[1] Including bearing initial fill

K-number: 674 version 2
SKF Mekan AB 2008

Mounting instruction for SNLN housings with taconite seals



Mounting SNLN housings with taconite seals

Before starting installation work, the following instructions should be read carefully.


1. Be sure that the work area is clean. Check the dimensional and form accuracy of the shaft seat. The shaft should be machined to a tolerance of h9/IT5 for adapter sleeve mounting.

2. Check that the roughness of the support surface is $R_a \leq 12{,}5$ µm. The flatness tolerance should be to IT7. Make sure that the mounting surface is clean. If shims are used, the whole surface must be covered by shims. The mounting surface (frame) must be designed to accomodate actual load, vibrations and settings.


3. Mount any components that are on the shaft between the two SNLN housings.


4. If the bearing is mounted on an adapter sleeve, determine its position relative to the housing. For spherical roller bearings with a lubrication groove and three holes in the outer ring, SKF recommends using the relubrication hole in the centre of the housing. When relubrication from the side of the bearing is required such as for CARB toroidal roller bearings or self-aligning ball bearings, the housing must be positioned so that the grease fitting is on the opposite side of the lock nut. When a housing is located at the end of a shaft, grease should be applied at the end cover side.

5. Position the housing on the support surface. Fit the attachment bolts, but do not tighten them.

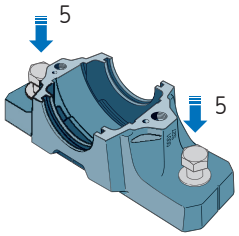


6a. *Up to and including size 32*. Mount the first V-ring together with one labyrinth seal on the shaft in the correct position. The lip of the V-ring should point towards the bearing. Place the split ring over the V-ring and labyrinth ring and screw together. The two parts of this split ring are not interchangeable. They should be checked to see that they carry the same serial number.

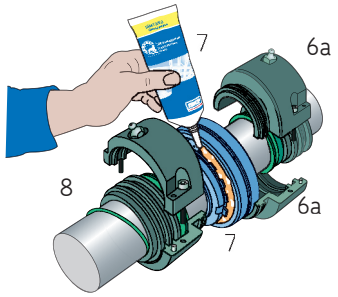

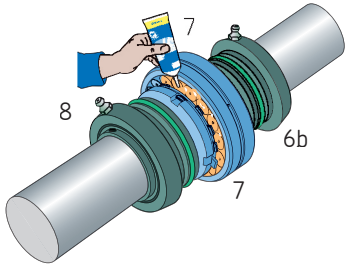


6b. *From size 34*. Slide the parts for the first seal to the correct position on the shaft. The lip of the V-ring should point towards the bearing. Do not tighten the grub screws.

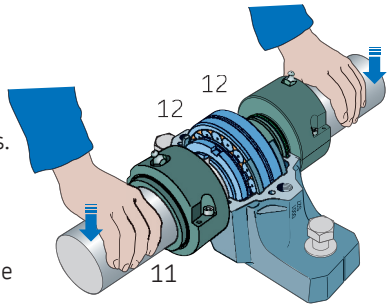

7. Mount the bearing on the shaft – either directly on a stepped shaft or using an adapter sleeve. Completely fill the bearing with grease. The remainder of the recommended grease quantity should be put in the housing base at the sides see **table 2**.


8. Mount the second seal according to point 6 (If a stepped shaft is used, first mount the distance ring). If the housing is to be used at the end of a shaft, the second seal is omitted and an end cover inserted in the housing base instead.

9. *Up to and including size 32*. Use the hollow O-section cord to fix the labyrinth ring in position on the shaft. A screwdriver can be used to fit the cords whilst rotating the shaft. Mount the O-ring on the seal outer diameter.

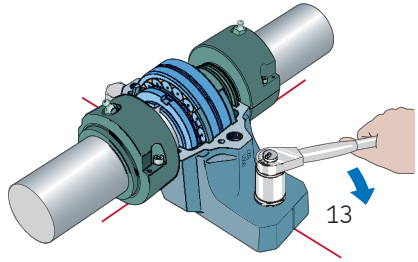

10. Mount the second bearing and housing, following steps 4 to 9.


11. Lay the shaft with the two bearings and seals in the two housing bases and for sizes up to and including size 32 taking care that the O-rings are not damaged.

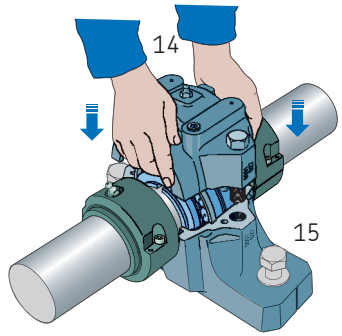

12. For locating bearing arrangements and arrangements with CARB toroidal roller bearings, put in one locating ring on each side of the bearing.


13. Carefully align the two housing bases. Vertical markings at the middle of the side faces and ends of the housing bases can facilitate this. Then, lightly tighten the attachment bolts on both housings.

14. Place the two housing caps over each base and tighten the cap bolts (to join cap and base), to the torque specified in **table 1**. The cap and base of one housing are not interchangeable with those of other housings. The cap and base of each housing should be checked to see that they bear the same serial number.

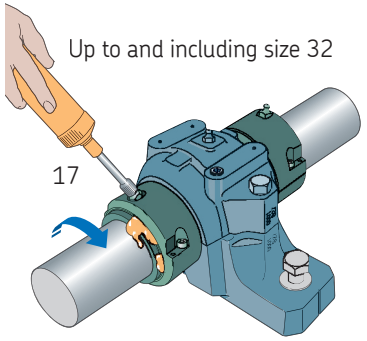

15. Check the alignment of the two housings to minimize misalignment and fully tighten the attachment bolts in the two housing bases. Recommended tightening torques are provided **table 1**.

16. *From size 34*. Adjust the flingers to the correct position and tighten the grub screws. The clearance in the seal must exceed the axial movement of the bearing.

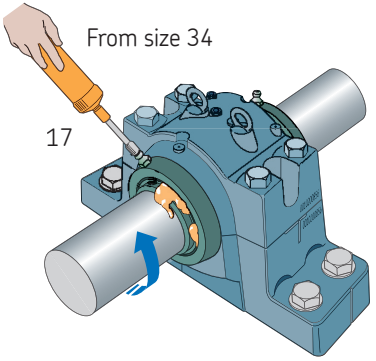

17. Finally, before the first test run, rotate the shaft and supply grease via the fitting until it exudes from the labyrinth rings. The same grease as that used for the bearings should also be used to lubricate the labyrinth rings.